
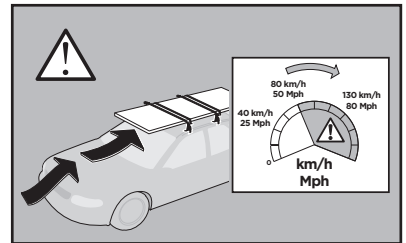
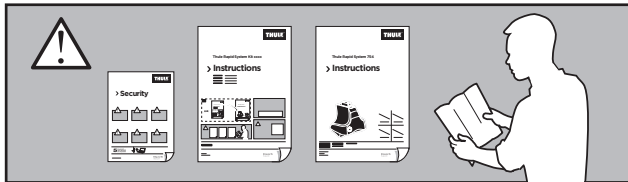
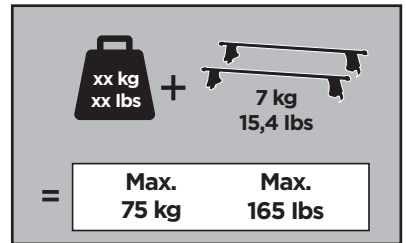


Thule Rapid System Kit 1037

> Instructions

HYUNDAI Sonata, 4-dr Sedan, 94-97



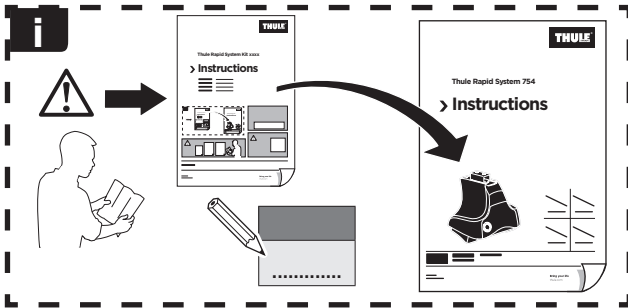


ISO 11154-E


141037

C.20130107
519-1037-01

Bring your life
thule.com

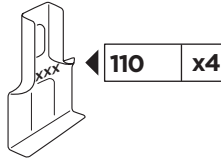



x1



x1

1



	X (scale)	X (mm)	X (inch)
HYUNDAI Sonata, 4-dr Sedan, 94-97	39	1041	41

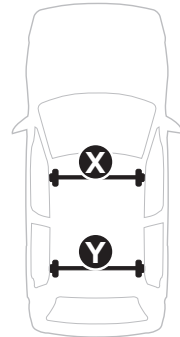
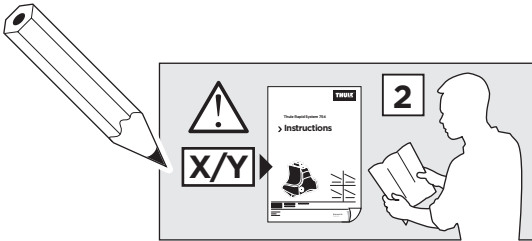


	Y (scale)	Y (mm)	Y (inch)
HYUNDAI Sonata, 4-dr Sedan, 94-97	35	1001	39 ³/₈

2

HYUNDAI Sonata, 4-dr Sedan, 94-97

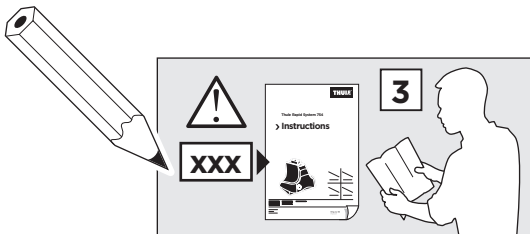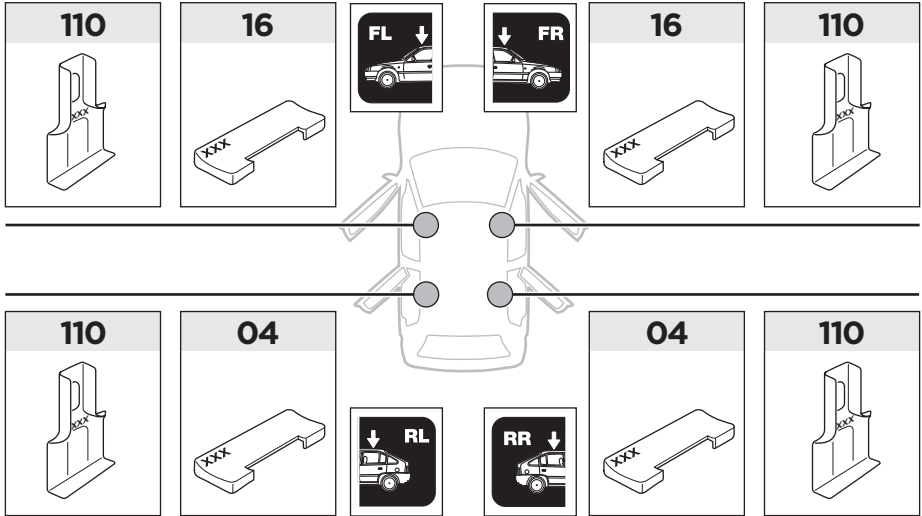

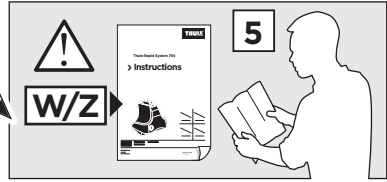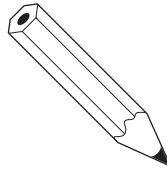3

	W (mm)	Z (mm)	W (inch)	Z (inch)
HYUNDAI Sonata , 4-dr Sedan, 94-97	220	650	8 ⁵/₈	25 ⁵/₈

