
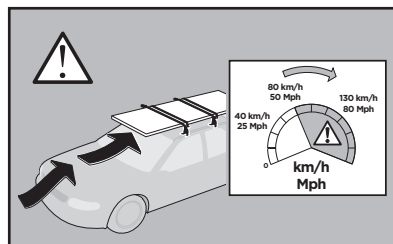
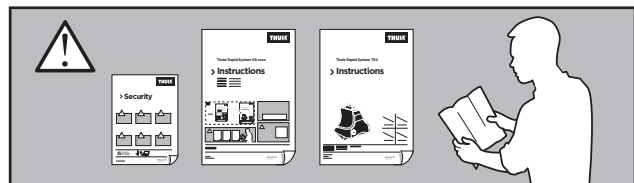
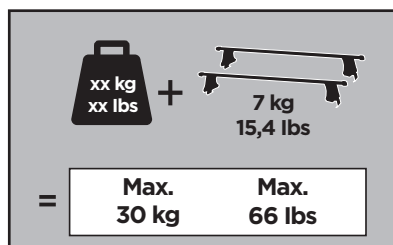


Thule Rapid System Kit 1343

> Instructions

SUZUKI Wagon R, 5-dr MPV, 03-07


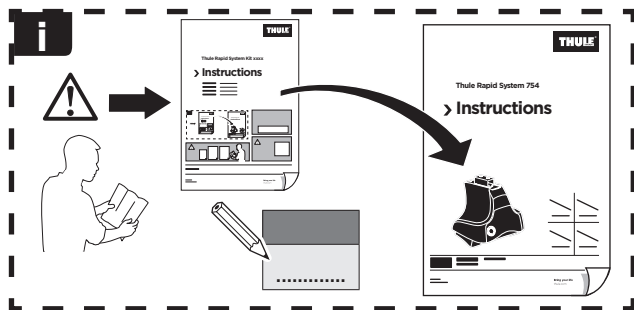


ISO 11154-E


141343

C.20121220
519-1343-01

Bring your life
thule.com

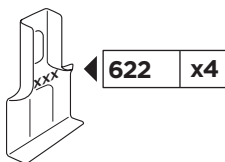




x1



x1

1



	X (scale)	X (mm)	X (inch)
SUZUKI Wagon R, 5-dr MPV, 03-07	29,5	946	37 ¹ / ₄

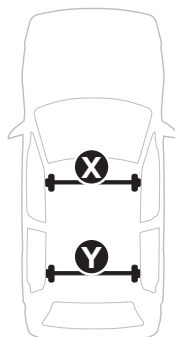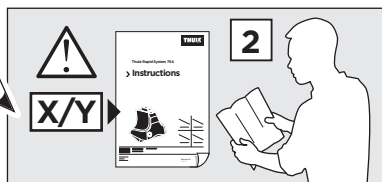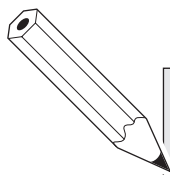


	Y (scale)	Y (mm)	Y (inch)
SUZUKI Wagon R, 5-dr MPV, 03-07	28	931	36 ⁵ / ₈

2

SUZUKI Wagon R, 5-dr MPV, 03-07

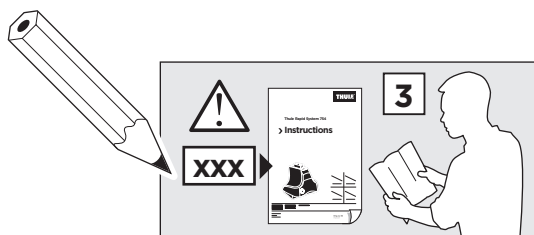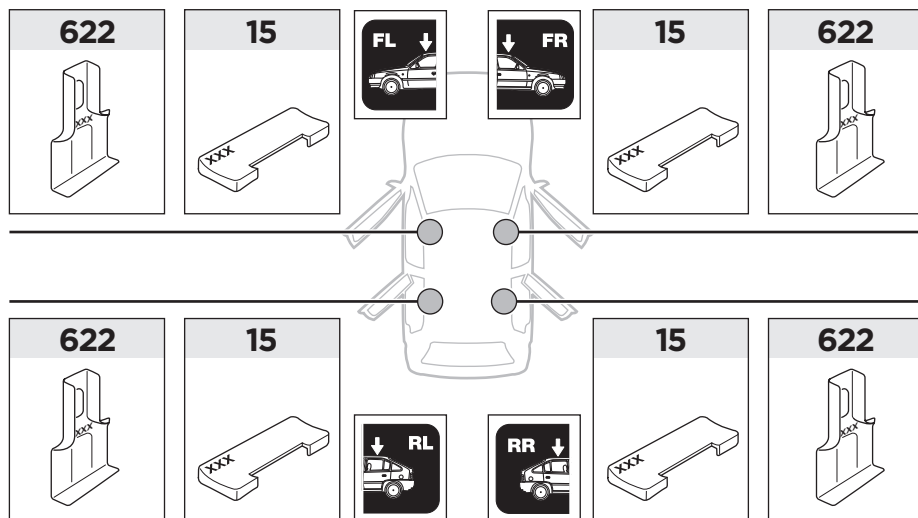

3

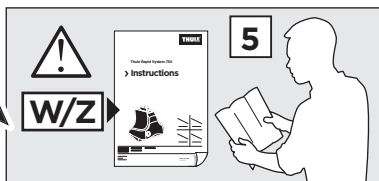

	W (mm)	Z (mm)	W (inch)	Z (inch)
SUZUKI Wagon R, 5-dr MPV, 03-07	510	700	20 $\frac{1}{8}$	27 $\frac{1}{2}$

